

DISH WASHING INSTRUCTION

1. Open the dishwasher front cover, then place all the dishes on the available rack accordingly.
2. Enter the dishwasher tablet into the space provided.



3. Slide the rack into the dishwasher. Then close your washing machine.
4. Press **POWER** → **RAPID** (for normal washing).





5. Cleaning process will take approximately 30 minutes. You can open dishwasher lid after the "cue" sound.

For further assistance, please do not hesitate to contact At Your Service.

ELECTRIC STOVE INTRUCTIONS

To start cooking

1. After the stove connected to electricity and power on.
Press and hold the ON/OFF control button for about 3 seconds till you hear a “beep” to turn the stove on. Now the stove enter into Standby mode, all heat setting indicators shows “-”
2. Place a suitable pan on the cooking zone that you wish to use. Make sure the bottom of the pan and the surface of the cooking zone are clean and dry
3. Touching the heating zone selection control button to select and active the cooking zone you wish to use. The heat setting indicator of the selected zone will flash when be active.
4. Then set heating level of cooking zone. You can adjust heat setting by touching the slider control.



To turn off stove

1. Adjust heat setting to 0 level, which indicator shows “-” 
2. You can also turn the whole stove off by touching the ON/OFF control button.



For further assistance, please do not hesitate to contact Delighted to Serve

MICROWAVE INSTRUCTIONS

PRESS MENU PROGRAM AUTO COOK ACCORDING TO BELOW TABLE

MENU	PRESS BUTTON	WEIGHT/PORTION
POPCORN	Once	1.75Oz
	Twice	3.0 Oz
	Thrice	3.5 Oz
POTATO	Once	1 pcs
	Twice	2 pcs
	Thrice	3 pcs
PIZZA	Once	4 Oz
	Twice	8 Oz
	Thrice	14 Oz
BEVERAGE	Once	1 cup
	Twice	2 cups
	Thrice	3 cups
DINNER PLATE	Once	9 Oz
	Twice	12 Oz
	Thrice	18 Oz
FROZEN VEGETABLE	Once	4 Oz
	Twice	8 Oz
	Thrice	16 Oz



THE FOOD AND RECIPIENT WILL BE VERY HOT WHEN REMOVED FROM OVEN, SO PLEASE USE OVEN PAD AND BE CAREFUL

For further assistance, please do not hesitate to contact At Your Service.

MICROWAVE INSTRUCTIONS

Please see back side to other instructions

HOW TO GRILL ?

1. Press "Time cook" button



2. Adjust timing for grill (max 20 minute)

3. Press "Power" button (GL 1)



4. Press "Start" button



THE FOOD AND RECIPIENT WILL BE VERY HOT WHEN REMOVED FROM OVEN, SO PLEASE USE OVEN PAD AND BE CAREFUL

For further assistance, please do not hesitate to contact At Your Service.

WASHING MACHINE LG


1. Sort clothes and place them inside the drum
2. Put detergent & softener into appropriate container




3. Select the desired washing program:
Please see washing machine program table on the back side



4. Select Dry Control Panel instruction:



5. Then, press the Start button
To pause the process, please press Start button twice during the washing. Press Start button again to resume



6. Additional Instruction for CHILD LOCK mode:
To activate/deactivate: press & hold Rinse+ button for 3 seconds



For further assistance, please do not hesitate to contact At Your Service.

WASHING MACHINE LG

WASHING TABLE

	Description	Fabric type	Proper Temp.	Maximum Load
Cotton	Provides better performance by combining various drum motions.	Colour fast garments (shirts, nightdresses, pajamas, etc) and normally soiled cotton load (underwear).	40°C (Cold to 95°C)	Rating
Cotton Large	Provides optimised washing performance for large amount of laundry with less energy consumption.		60°C (Cold to 60°C)	
Easy Care	This cycle is suitable for casual shirts that do not need ironing after washing.	Polyamide, Acrylic, Polyester .	40°C (Cold to 60°C)	Less than 4.5 kg
Mix	Enables various fabrics to be washed simultaneously.	Various kind of fabrics except special garments. (Silk/delicate, sports wear, dark clothes,wool, DuveCurtains).	40°C (Cold to 40°C)	
Allergy Care	Help to remove allergens such as house mites,pollen,and cat fur.	Cotton, underwear, pillow covers, bed sheets, baby wear.	60°C	
Direct Wear	This cycle provides washing to drying within 80mins at once for light soiled 1-3 shirts.	Cotton Mixed, Polyester mixed Dress shirts, blouses.	20°C	
Steam Refresh	Help to remove wrinkles within 20mins with steam.(Clothes may be wet. You can put them on after hang out to dry for10-30min.)	Cotton Mixed, Polyester mixed Dress shirts, blouses.	No choice	3 items
Duvet	This cycle is for large items such as bed cover, pillows, sofa covers, etc.	Cotton bedding except special garments (delicates, wool, silk, etc.) with filling; duvets, pillows, blankets, sofa covers with light filling.	40°C (Cold to 40°C)	1 single size
Sports Wear	This cycle is suitable for sports wear such as jogging clothes and running wear.	Coolmax , Gore-lex, fleece and Sympatex.		Less than 3.0 kg
Quick 30	This cycle provides fast washing time for small loads and lightly soiled clothes.	Coloured laundry which is lightly soiled fast.	20°C (Cold to 40°C)	
Wash + Dry	This cycle provides nonstop process from washing to drying at once.	A small amount of laundry which can be dried.	40°C (Cold to 40°C)	Less than 5.0 kg
Gentle Care	This cycle is for hand and machine washable delicate clothes such as washable wool, lingerie, dresses etc. (Please use detergent for machine washable woolens).	Wool, hand washable clothes. Delicate, easily damaged laundry.	20°C (Cold to 20°C)	Less than 1.5 kg
Stain Care	Wash off several kinds of stain such as wine , juice, dirt, etc. (Water temperature is increased step by step for washing various stains.)	Cotton blended fabrics. NOT delicate clothes.	40°C (40°C to 60°C)	Less than 3.0 kg
Download Cycle	For downloadable cycles. If you did not download any cycles, 'Rinse+Spin' is set.			

食器洗いの指導

1. 食器洗い機の蓋を開けて、すべての機器をその場所に応じて利用可能な棚に置きます。
2. 食器洗い機用タブレットを指定されたスペースに置きます。



3. 棚を食器洗い機にスライドさせます。その後、洗濯機を閉じてください。
4. 電源→急速（通常の洗浄の場合）を押します。



5. クリーニングプロセスには約 30 分かかります。「ピンピン」という音の後に食器洗い機の蓋を開けることができます。

For further assistance, please do not hesitate to contact At Your Service.


電気ストーブの指示

料理を始めるには;

1. ストーブが電気に接続された後、電源が入った後。
「ピーブ音」が鳴るまで ON/OFF コントロールボタンを約 3 秒間押し続けてストーブをオンにします。
今は、ストーブはスタンバイモードになります。すべての熱設定します。
インジケーターは「-」を示します。



2. 使用したい調理ゾーンに適切な鍋を置きます。
鍋の底と調理ゾーンの表面が清潔で乾燥していることを確認してください。



3. 加熱ゾーン選択コントロールボタンを接触して、使用する調理ゾーンを選択してアクティブにします。
アクティブな場合、選択したゾーンの熱設定インジケーターが点滅します。



4. 次に、調理ゾーンの加熱レベルを設定します。スライダーコントロールを接触して、熱設定を調整できます。



ストーブの電源を切るには:

1. インジケーターが「-」を示す熱設定を 0 レベルに調整します。
2. ON/OFF コントロールボタンを接触してして、ストーブ全体の電源を切ることもできます。



ご不明な点がございましたら、お気軽に Delighted to Serve までご連絡ください。

電子レンジの指導

下の表に応じてメニュープログラム自動調理を押します。

メニュー	ボタンを押す	重量/部分
ポップコーン	ある時	1.75オズ
	二度	3.0 オズ
	三度	3.5 オズ
ジャガイモ	ある時	1 部分
	二度	2 部分
	三度	3 部分
ピザ	ある時	4 オズ
	二度	8 オズ
	Thrice	14 オズ
飲料	ある時	1カップ
	二度	2カップ
	三度	3カップ
ディナープレート	ある時	9 オズ
	二度	12 オズ
	三度	18 オズ
冷凍野菜	ある時	4 オズ
	二度	8 オズ
	三度	16 オズ



他の指示の裏面を参照してください。

オープンから取り出すと、食品やレシピエントが非常に熱くなりますので、オープンパッドを使用して注意してください
さらにサポートが必要な場合は、お気軽にAt Your Serviceにお問い合わせください。

他の指示の裏面を参照してくださいグリルの仕方は？

1. 「時間調理」 ボタンを押します。
2. グリルのタイミングを調整します (最大の 20 分).
3. 「電源」 ボタン (GL 1) を押します。



4. 「開始」 ボタンを押します。



オープンから取り出すと、食品やレシピエントが非常に熱くなりますので、オープンパッドを使用して注意してください
さらにサポートが必要な場合は、お気軽にAt Your Serviceにお問い合わせください。

WASHING MACHINE LG


1. 衣類を分類してドラムの中に入れます。
2. 洗剤と柔軟剤を適切な箱に入れる。
- 3.




4. 希望の洗濯プログラムを選択します。
裏面の洗濯機プログラム表をご覧ください。



5. ドライコントロールパネルの選択手順:



6. 次に、スタートボタンを押します。
もう一度押すとプログラムは一時停止し、三度目に押すと再起動します。



さらにサポートが必要な場合は、At Your Service までお気軽にお問い合わせください。

WASHING MACHINE LG

洗濯台

	説明	ファブリックタイプ	適正温度	最大荷重
コットン	さまざまなドラムモーションを組み合わせて、より優れたパフォーマンスを実現します。	色落ちしやすい衣類 (シャツ、ナイトドレス、パジャマなど) および通常は汚れた綿製品(下着)。	40°C (冷~95°C)	評価
コットン 大	少ないエネルギー消費で大量の洗濯物に最適な洗浄パフォーマンスを提供します。		60°C (冷~60°C)	
イージーケア	洗濯後のアイロンがけが不要なカジュアルシャツに適したサイクルです。	ポリアミド、アクリル、ポリエステル。	40°C (冷~60°C)	4.5kg未満
ミックス	さまざまな生地を同時に洗濯できます。	特殊衣料品を除く各種生地を取り揃えてあります (シルク/デリケート、スポーツウェア、濃い色の服、ウール、デュブカーテン)。	40°C (冷~40°C)	
アレルギーケア	イエダニ、花粉、猫の毛などのアレルギーを除去するのに役立ちます。	コットン、肌着、枕カバー、ベッドシーツ、ベビーウェア。	60°C	
直接着用	このサイクルでは、軽い汚れのシャツ1~3枚であれば、一度に80分以内に洗濯から乾燥まで完了します。	綿混、ポリエステル混のドレスシャツ、ブラウス。	20°C	
スチームリフレッシュ	スチームで20分以内にシワを伸ばします。(服は濡れている場合があります。30分ほど干して乾燥させてから着用してください)。	綿混、ポリエステル混のドレスシャツ、ブラウス。	選択の余地なし	3件
羽毛布団	このサイクルはベッドカバー、枕、ソファカバーなどの大きなアイテムに適しています。	中綿入りの特殊衣類(デリケート、ウール、シルクなど)を除く綿製寝具：軽い中綿入りの羽毛布団、枕、毛布、ソファカバー。	40°C (冷~40°C)	シングルサイズ3枚
スポーツウェア	ジョギングウェアやランニングウェアなどのスポーツウェアに適したサイクルです。	クールマックス、ゴアレックス、フリース、シンパテックス。		3.0kg未満
クイック30	このサイクルでは、少量の衣類や軽い汚れの衣類を短時間で洗濯できます。	軽い汚れが早い色の洗濯物。	20°C (冷~40°C)	
洗濯+乾燥	このサイクルで洗濯から乾燥までノンストップで一気に仕上げます。	少量の洗濯物も干せます。	40°C (冷~40°C)	5.0kg未満
優しいケア	このサイクルは、ウォッシュアブルウール、ランジェリー、ドレスなどの手洗いや洗濯機で洗えるデリケートな衣類用です(洗濯機で洗えるウール製品には洗剤を使用してください)。	ウール製、手洗い可能な衣類。繊細で傷つきやすいランドリー。	20°C (冷水~20°C)	1.5kg未満
ステインケア	ワイン、ジュース泥など数種類の汚れを洗い流します(さまざまな汚れを洗浄する場合、段階的に水温を上げていきます)。	コットン混紡生地。デリケートな服ではありません。	40°C (40°C~60°C)	3.0kg未満
ダウンロードサイクル		ダウンロード可能なサイクルの場合、サイクルをダウンロードしなかった場合は、「Rinse+Spin」が設定されます。		

さらにサポートが必要な場合は、At Your Service までお気軽にお問い合わせください。

洗碗机说明

1. 打开洗碗机盖, 将所有设备放在架子上.
2. 将洗碗机平板放入在提供的空间中.



3. 关闭洗碗机.
4. 按下 **POWER** → **RAPID** (正常洗涤).





5. 清洁过程大约需要 30 分钟。您可以在“叮叮”声后打开洗碗机盖.

如需进一步帮助, 请随时联系 At Your Service

电炉使用说明

开始做饭

1. 炉子接上电源后，通电。按住 ON/OFF 控制按钮约 3 秒，直至听到“嘟”一声，灶具打开。此时灶具进入待机模式，所有加热设置指示灯显示“-”
2. 将合适的平底锅放在您想要使用的烹饪区上。确保锅底和烹饪区表面清洁干燥
3. 触摸加热区域选择控制按钮以选择并激活您想要使用的烹饪区域。激活时，所选区域的加热设置指示灯将闪烁。
4. 然后设置烹饪区的加热级别。您可以通过触摸滑块控件来调整加热设置。



关闭炉灶

1. 将热量设置调至 0 级，指示灯显示“-”
2. 您还可以通过触摸开/关控制按钮来关闭整个炉灶。



如需进一步帮助，请随时联系 At Your Service

微波炉使用说明

根据下表按下菜单程序自动烹饪

食物	按下按钮	WEIGHT/PORTION
POPCORN 爆米花	一次	1.75Oz
	两次	3.0 Oz
	三次	3.5 Oz
POTATO 土豆	一次	1 个
	两次	2 个
	三次	3 个
PIZZA 比萨	一次	4 Oz
	两次	8 Oz
	三次	14 Oz
BEVERAGE 饮料	一次	1 杯
	两次	2 杯
	三次	3 杯
DINNER PLATE 餐盘	一次	9 Oz
	两次	12 Oz
	三次	18 Oz
FROZEN VEGETABLE 冷冻蔬菜	一次	4 Oz
	两次	8 Oz
	三次	16 Oz

请参阅其他说明的背面如何烧烤



从微波炉中取出食物时会非常热，因此请使用烤箱垫并小心。如需进一步帮助，请随时联系 **At Your Service**

微波炉使用说明

1. 按下按钮“Time cook”



2. 调整时间 (最多 20 分钟)

3. 按下按钮 “Power” (GL 1)



4. 按下按钮“Start”



LG 洗衣机说明


1. 将衣服分类并放入滚筒内
2. 将洗涤剂 and 柔顺剂放入适当的盒子中




3. 选择所需的洗涤程序:
请参阅背面的洗衣机程序表



4. 选择干燥控制面板指令:

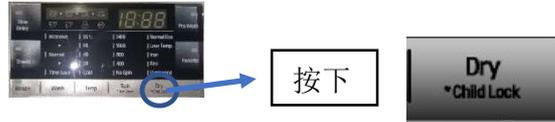

5. 然后, 按 start 按钮
如果再按一次, 程序将暂停, 第三次按时将重新启动

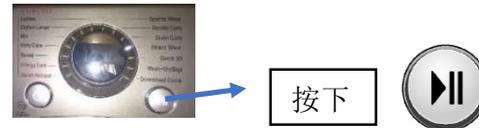

如需进一步帮助, 请随时联系 At Your Service

LG 洗衣机说明

	描述	面料类型	适当的温度	最大负载能力
Cotton	通过组合各种鼓运动提供更好的性能	不褪色的服装（衬衫、睡衣、睡衣等）	40°C (Cold 至 95°C)	评分
Cotton Large	以更少的能耗为大量衣物提供优化的洗涤性能	不褪色的服装（衬衫、睡衣、睡衣等）	60°C (Cold 至 60°C)	评分
Easy Care	此循环适用于洗后无需熨烫的休闲衬衫	聚酰胺、丙烯酸、聚酯。	40°C (Cold 至 60°C)	小于 4.5 公斤
Mix	可以同时洗涤多种织物	除特殊服装外的各种面料。（丝绸/精致、运动服、深色衣服、羊毛、DuvetCurtains）	40°C (Cold 至 40°C)	小于 4.5 公斤
Allergy Care	帮助去除过敏原，如螨虫、花粉和猫毛	棉质、内衣、枕套、床单、婴儿装。	60°C	小于 4.5 公斤
Direct Wear	此循环可在 80 分钟内一次性洗涤 1-3 件轻度脏污衬衫。	棉混纺。涤纶混纺正装衬衫、衬衫。	20°C	3 件
Steam Refresh	用蒸汽在 20 分钟内帮助去除皱纹。（衣服可能是湿的，晾干 10-30 分钟后即可穿上。	棉混纺、涤纶混纺正装衬衫、衬衫。	没选着	3 件
Duvet	此周期适用于大型物品，例如床罩、枕头、沙发套等。	棉质床上用品，除特殊服装（精致、羊毛、丝绸等）外，有填充物：羽绒被、枕头、毛毯、轻质填充物沙发套-	40°C (Cold 至 40°C)	1 个单一尺寸 / 小于 3 公斤
Sports Wear	此循环适合慢跑服、跑步服等运动服。	酷麦克斯。Gore-lex、抓绒和 Sympatex。	40°C (Cold 至 40°C)	小于 3 公斤
Quick 30	该循环可快速洗涤小件衣物和轻度脏污的衣物。	彩色衣物不易脏。	20°C (Cold 至 40°C)	小于 3 公斤

如需进一步帮助，请随时联系 At Your Service

LG 洗衣机说明

Wash + Dry	这个循环提供了从洗涤到烘干的不间断过程	可以烘干少量的衣物。立刻	40°C (Cold 至 40°C)	小于 5 公斤
Gentle Care	此周期适用于可手洗和机洗的精致衣物，例如可洗羊毛、内衣、连衣裙等（请使用可机洗羊毛的洗涤剂）。	羊毛、可手洗的衣服。精致、容易损坏的衣物。	20°C (Cold 至 20°C)	小于 1.5 公斤
Stain Care	洗掉酒、果汁、污垢等多种污渍。（清洗各种污渍时，水温逐步升高。）	棉混纺织物。不是精致的衣服。	40°C (40°C 至 60°C)	小于 3 公斤
Download Cycle	用于可下载的周期。如果您没有下载任何循环，则会设置“冲洗+旋转”			

如需进一步帮助，请随时联系 **At Your Service**